

## Safety and Operating Instructions: Robot Cook®



ON / OFF  
Alimentation électrique  
ON / OFF switch  
Power supply  
ON / OFF  
Elektrische voeding  
AN / AUS  
Stromversorgung



### Control Panel

#### Settings



Power Off Button



Power On Button



Turbo / Pulse Button > 4500 rpm



Rotary Dial

#### Settings



Low and High Heat Function



Speed Function



Timer Function



**+ 3500**  
Speed > 3500 rpm

**0 > -500 R-MIX**  
Blend Speed

**OIOIO**  
Intermittent Speed:  
Heating Precision

#### Programming






9 programmes




Steps for each programme

## Cleaning and maintenance



### Scraper

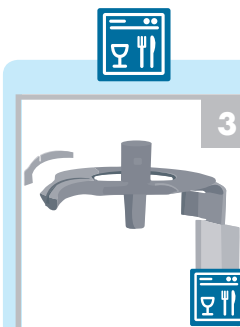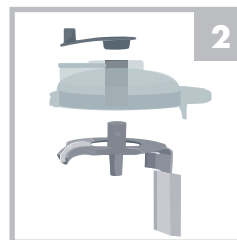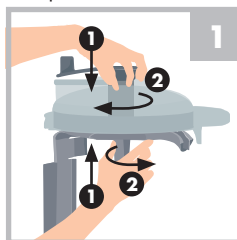

### Lid

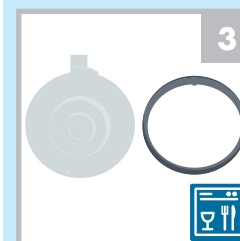





### Blade

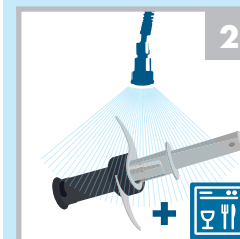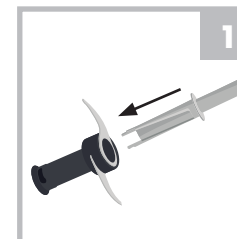

### Temperature contact points



## Safety

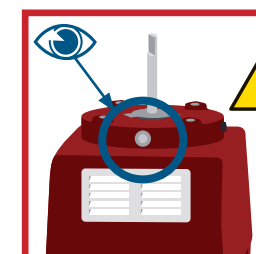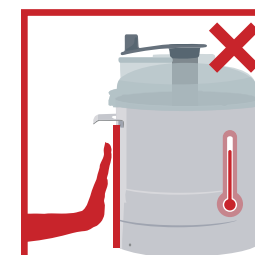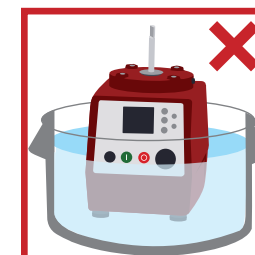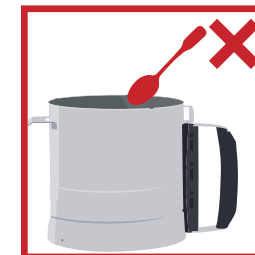

Never try to remove the locking and safety systems.